



CORPORATE OFFICE

51 S. 2nd Street, Hamilton, IL 62341
Ph. 217-847-3324 Toll Free 1-888-922-1293

M00370 CAPPINGS TANK



Assembly



Operation



Maintenance



Replacement Parts



ASSEMBLY

1. Remove from carton and completely unpack.
2. Turn tank upside down and insert legs, with casters attached, into leg brackets.
3. Turn upright on casters.
4. For adapting drain to plastic tubing(1-1½ " tubing) remove the tape from the drain adapter assembly (No. 5-215) and hand tighten nut on to drain fitting.
5. If cappings baskets(M00371) are to be used, place one pair of the baskets in the tank bottom so that the basket runners allow honey to flow to the drain. Clip the baskets together with clip(No. 371-03) and slide the baskets to the end of the tank, away from the drain.
6. If uncapping into baskets, place cross bar (No. 370-03) on top of tank as follows:
 - Remove wing nut and washer from one end.
 - Opposing washer is placed under tank lip.
 - Replace washer and nut removed and position the cross bar for uncapping and tighten wing nuts.
7. Uncap with the end bar resting on the lag screw.

OPERATION

This cappings tank was designed as a multi-purpose unit. It can be used as a frame holding tank (24 frames maximum), uncapping tank, cappings draining tank, and with liquefier and heater accessories it functions as a 3-5 gallon can liquefier.

MAINTENANCE


- 1. Wash thoroughly after use with hot water.
- 2. Lubricate casters annually.

**Replacement Parts for
M00370 36" Cappings Tank**

Part Number	Description
04-37002	Leg
03-50296	Caster with Brake
03-37003	Wooden Uncapping Cross Bar
03-50219	Tank Drain Assembly

**Replacement Parts for
M00371 Cappings Baskets**

Part Number	Description
04-37101	Basket Frame
04-37102	Basket Bottom

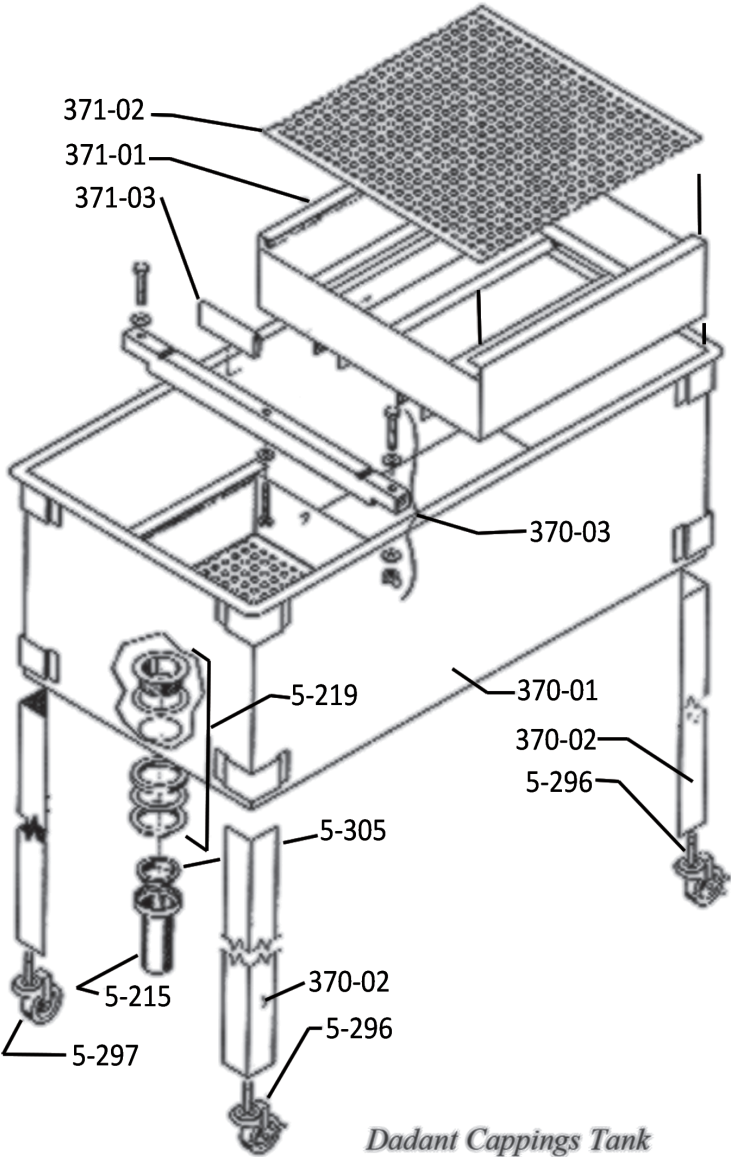

*Dadant Cappings Tank
Replacement Parts Diagram*



**M00371
CAPPINGS BASKETS**