


PIERCE DELUXE UNCAPPING TUB KIT #249

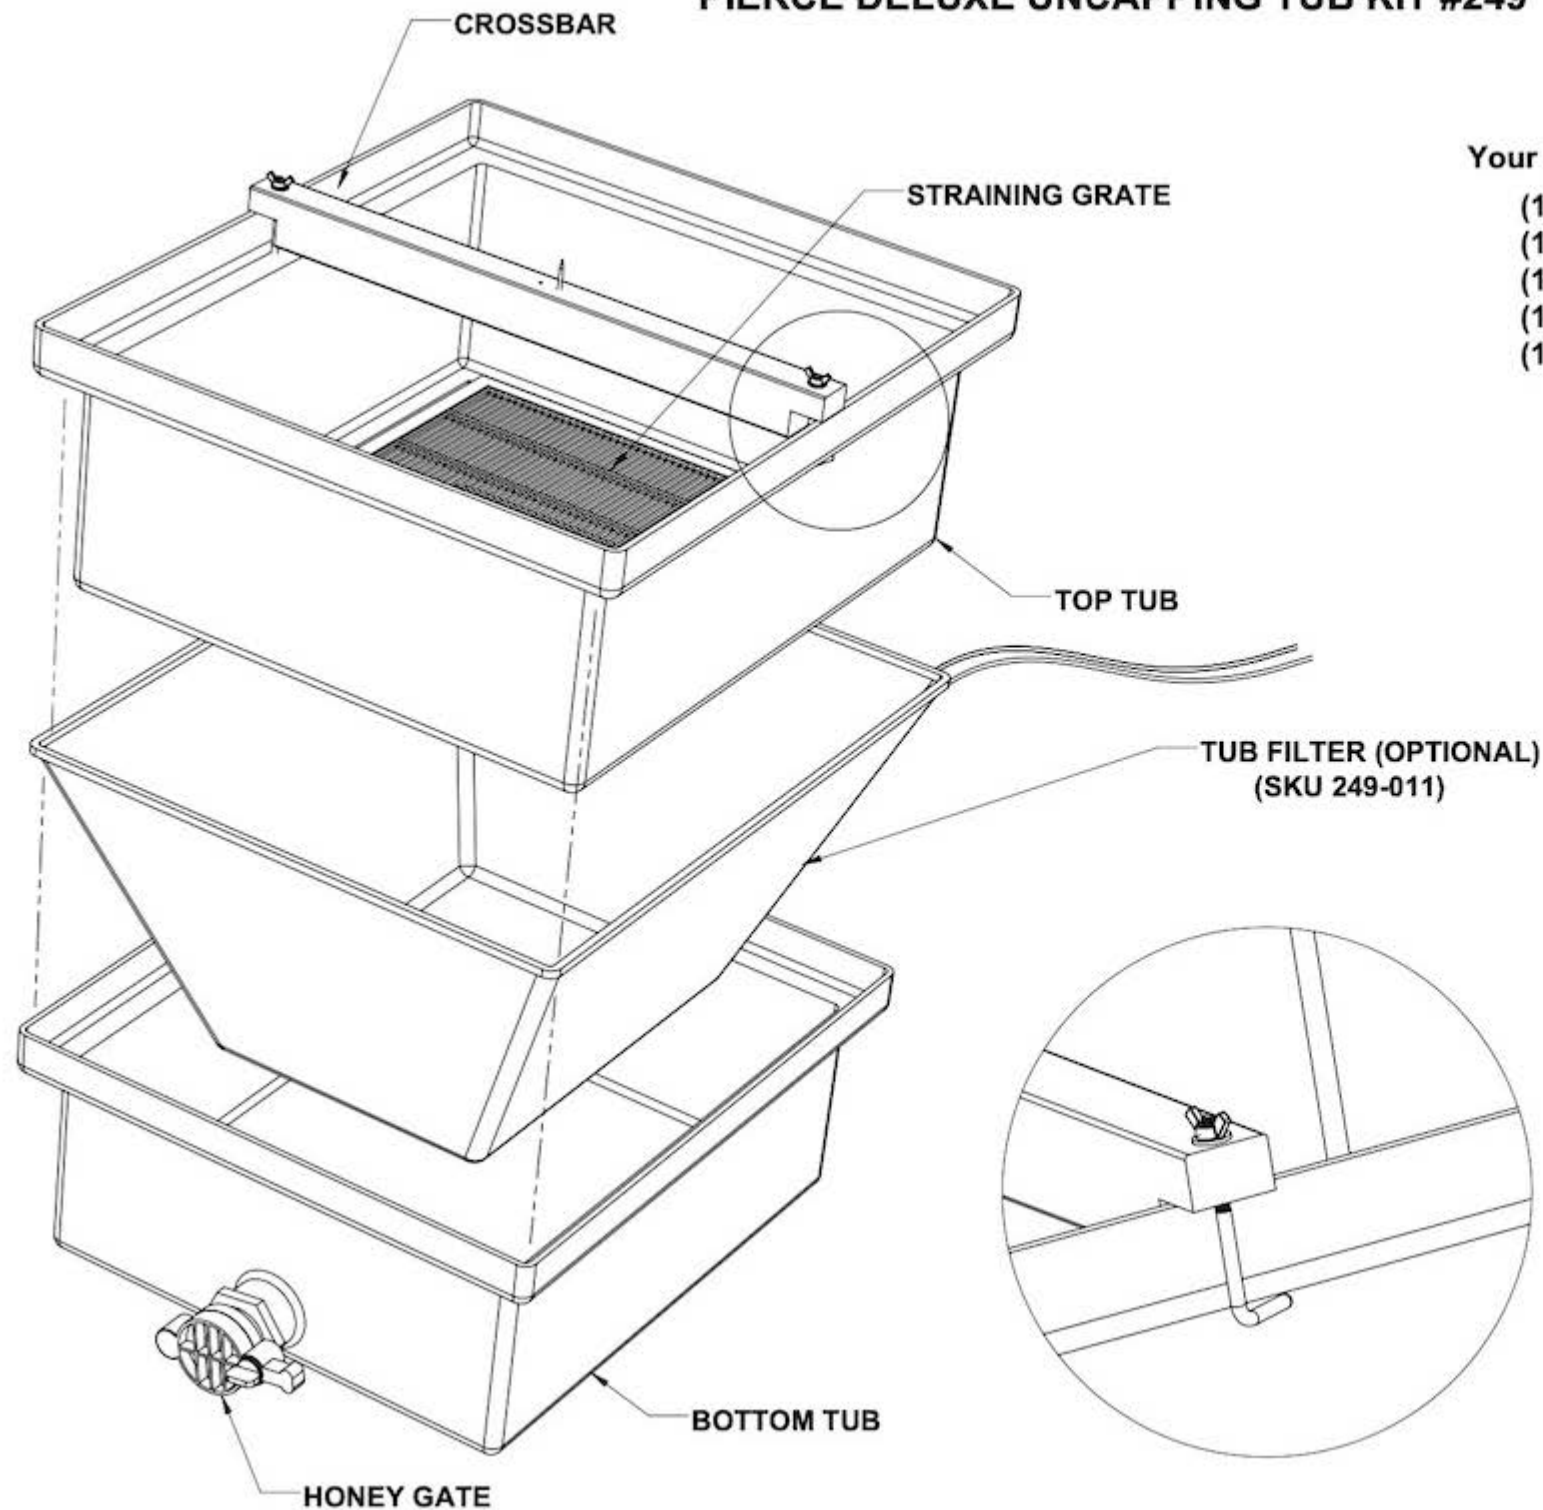

Your Pierce Deluxe Tub Kit #249 contains the following:

- (1) Set Polyethylene Tub Tanks (one each Top and Bottom)
- (1) Polyethylene Tub Cover (not shown)
- (1) Metal Straining grate
- (1) Honey Gate with instructions
- (1) Crossbar

ASSEMBLY

1. Assemble the tanks. Place the bottom tub (the one with the threaded hole for the Honey Gate) on a flat surface.
2. If you purchased an optional Tub Filter (SKU-249-011), insert the filter into the bottom tub. Fold the excess filter material over the lip of the bottom tub. Secure the filter by tightening the string around the lip of the bottom tub.
3. Place the top tub (with the open bottom) onto the bottom tub.
4. Install the straining grate into the top tub.
5. Place the crossbar across the narrow side of top tub. Turn the "J" bolts so that they are under the tub step. Gently tighten the wingnuts to hold the crossbar in place.
6. Install the Honey Gate following its instruction sheet, being careful not to overtighten.